

D005SNG



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

D005SNB



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

Technical information about the installation of SMOVE D005SN to be recessed

Insert Smove D005 into the cabinet side opposite the hinges. For an optimal performance, we suggest that Smove D005 is positioned at the centre of the side panel.

It is suggested for doors from 450 mm to 600 mm width.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the upper part and the second into the lower part of the cabinet side opposite the hinges.



D006SNG



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

D006SNB



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

Technical information about the installation of SMOVE D006SN to be recessed

Insert Smove D006 at the centre of the top or the base panel of the cabinet.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the top and the second into the base panel of the cabinet.



D008SNG



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

D008SNB



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

Technical information about the installation of SMOVE D008SN to be recessed

Insert Smove D008 into the top or the base panel of the cabinet on the hinged side.

A drilling distance of 27 mm from the cabinet side is suggested.

For doors over 1600 mm height, it may be necessary to use two Smove, one to be inserted into the top and the second into the base panel of the cabinet.



D009SNG



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

D009SNB



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

Technical information about the installation of SMOVE D009SN to be recessed

Insert Smove D009 into the base panel of the cabinet on the hinged side.

Smove D009 is used for doors between 720 mm and 1600 mm high.

Drilling distance from the cabinet side:

- for hinges with **arm 0 mm** the drilling distance equals **15 mm** plus the base height;
- for hinges with **arm 5 mm** the drilling distance equals **20 mm** plus the base height;
- for hinges with **arm 9 mm** the drilling distance equals **24 mm** plus the base height.



D010SNG



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

D010SNB



Smove

Packing

Boxes 250 pcs.
Cartons 2.000 pcs.

Technical information about the installation of SMOVE D010SN to be recessed

Insert Smove D010 into the base panel of the cabinet on the hinged side.

Smove D010 is used for doors over 1600 mm high.

Drilling distance from the cabinet side:

- for hinges with **arm 0** mm the drilling distance equals **15 mm** plus the base height;

- for hinges with **arm 5** mm the drilling distance equals **20 mm** plus the base height;

- for hinges with **arm 9** mm the drilling distance equals **24 mm** plus the base height.



To be recessed - Assembly instructions

Drill a hole \varnothing 10 mm and min. 50 mm depth in the cabinet.
Insert Smove into the hole.



Technical information about the installation of SMOVE with adapter



SMOVE D005 can be fitted using:

- 1) adapters to be screw-fixed to the cabinet side (see pages 265 and 266);
- 2) adapters with double sided adhesive system (see page 268).

It is suggested for doors from 450 mm to 600 mm width.

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the upper part and the second to the lower part of the cabinet side opposite the hinges.

SMOVE D006 can be fitted using:

- 1) adapters to be screw-fixed to the top or bottom panel of the cabinet (see pages 265 and 266);
- 2) adapters with double sided adhesive system (see page 268).

For wood-based and alu-framed doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the top and the second to the base panel of the cabinet.



SMOVE D008 can be fitted using:

- 1) adapters to be screw-fixed to the top or bottom panel of the cabinet (see pages 265 and 266); Smove should be positioned at a distance of 27 mm from the inside face of the cabinet side. If using cruciform adapters, the correct position is located by moving the adapters so that one wing is in contact with the inside face of the cabinet.
- 2) adapters with double sided adhesive system (see page 268).

For doors over 1600 mm height, it may be necessary to use two Smove, one to be fixed to the top and the second to the base panel of the cabinet.

- 3) adapters to be screw-fixed to the inside of the cabinet door (see page 270).

D008 is used for doors up to 720 mm high.



SMOVE D009 and D010 can be fitted using:


- 1) longitudinal adapters to be screw-fixed to the base panel of the cabinet (see pages 265 and 266);
- 2) adapters to be screw-fixed to the inside of the cabinet door (see page 270).

D009 is used for doors between 720 mm and 1600 mm high.

D010 is used for doors over 1600 mm high.

Adapters to be screw fixed to the cabinet

D063SNXR

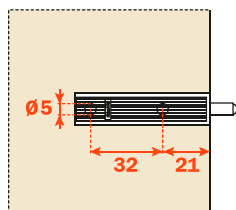


D063SNGR = grey
D063SNBR = beige

Longitudinal plastic adapter.
To be fixed with dowels.
Without assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D064SNXN

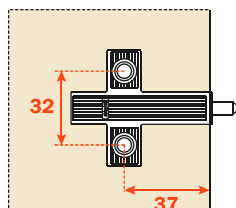


D064SNGN = grey
D064SNBN = beige

Cruciform plastic adapter.
To be fixed with wood screws.
37x32 mm drilling.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D064SNXR

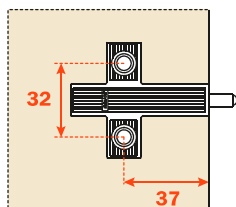


D064SNGR = grey
D064SNBR = beige

Cruciform plastic adapter.
To be fixed with wood screws.
37x32 mm drilling.
Without assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D065SNGR = grey - to be fixed with Euroscrews.
D065SNBR = beige - to be fixed with Euroscrews.

D060SNXN

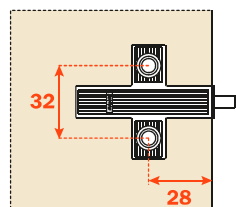


D060SNGN = grey
D060SNBN = beige

Cruciform plastic adapter.
To be fixed with wood screws.
28x32 mm drilling.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D060SNXR

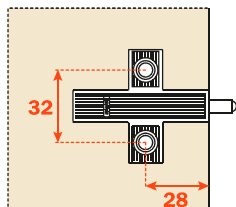


D060SNGR = grey
D060SNBR = beige

Cruciform plastic adapter.
To be fixed with wood screws.
28x32 mm drilling.
Without assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D066SNXN

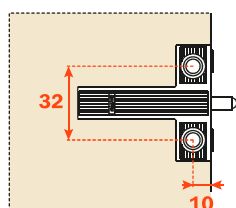


D066SNGN = grey
D066SNBN = beige

Cruciform plastic adapter.
To be fixed with wood screws.
10x32 mm drilling.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

Smove - Adapters to be screw fixed to the cabinet

D070SNXN

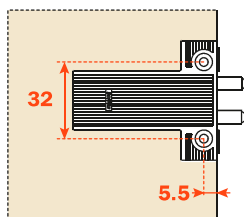


D070SNGN = grey
D070SNBN = beige

Double cruciform plastic.
To be fixed with wood screws.
5.5x32 mm drilling.
With assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D070SNXR

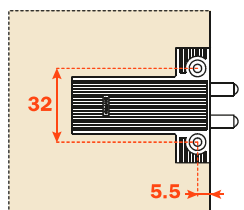


D070SNGR = grey
D070SNBR = beige

Double cruciform plastic.
To be fixed with wood screws.
5.5x32 mm drilling.
Without assembly stop device.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D076XX9R

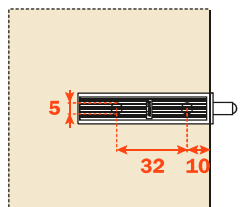


Longitudinal die-cast adapter.
To be fixed with wood screws.
Without assembly stop device.

Cover caps to be ordered
separately.

D077XX9R - to be fixed with Euroscrews.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

D076SN9

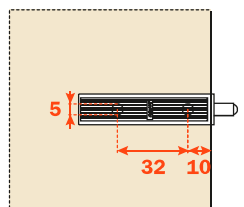

Longitudinal die-cast adapter.
To be fixed with wood screws.
With assembly stop device.

Cover caps to be ordered
separately.

D077SN9 - to be fixed with Euroscrews.

Packing
Boxes 500 pcs.
Pallets 12.000 pcs.

Adapter with assembly stop device

Insert Smove into the adapter. Place the adapter in the position in the cabinet appropriate to the version of Smove to be installed, using the assembly stop device for final positioning.



Adapter without assembly stop device

Insert Smove into the adapter. Place the adapter in the position in the cabinet appropriate to the version of Smove to be installed, based on the dimensions indicated for the type of adapter.



D051SNX



D051SNG = grey
D051SNB = beige

Longitudinal plastic.
With assembly stop device.

Packing

Boxes 500 pcs.
Pallets 12.000 pcs.

D086SNX



D086SNG = grey
D086SNB = beige

Longitudinal plastic with
additional fixing screw.
To be fixed with double sided
adhesive system.
It is suggested to fix the adapter
with the included screw.
For application with full
overlay door.
With assembly stop device

Packing

Boxes 500 pcs.
Pallets 12.000 pcs.

D087SNX



D087SNG = grey
D087SNB = beige

Longitudinal plastic with
additional fixing screw.
To be fixed with double sided
adhesive system.
It is suggested to fix the adapter
with the included screw.
For application with full and half
overlay door.
With assembly stop device.

Packing


Boxes 500 pcs.
Pallets 12.000 pcs.

With adapter to be fixed with double sided adhesive system - Assembly instructions

For a correct application and to ensure optimal endurance, we suggest these guidelines are followed:


- 1) clean and de-grease the cabinet surface where the adapter is to be installed using an acetone based cleaner;
- 2) remove the protective strip from the adhesive;
- 3) place the adapter in position and apply a firm pressure for about one minute;
- 4) insert Smove frontally into the adapter;
- 5) allow a period of 12 hours to elapse before subjecting the product to continuous usage.

As an option for additional security, the adapters D086SNX and D087SNX can be fixed with the included wood screw.

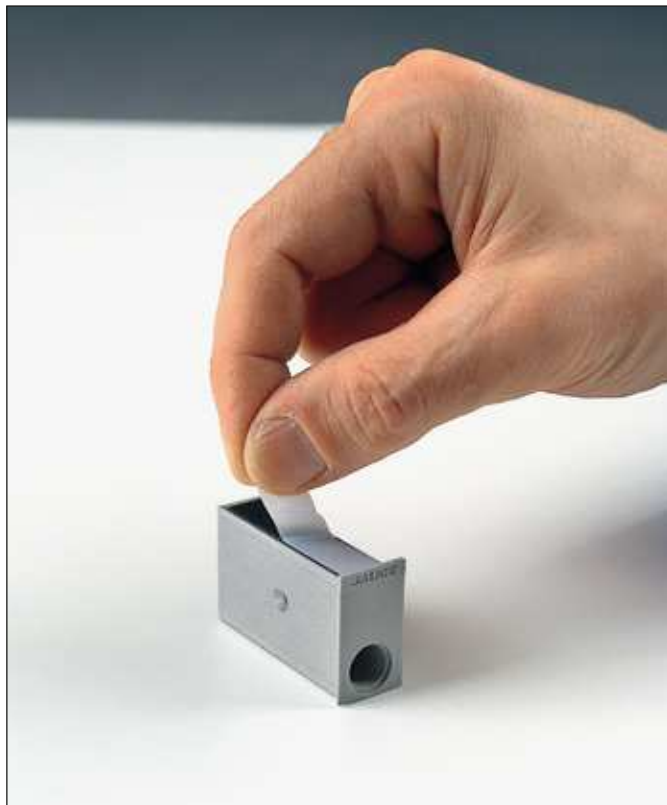

Smove - Adapter to be screw fixed to the door

D078XX9

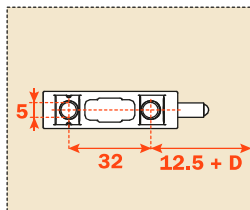

Longitudinal inclined die-cast adapter.
To be fixed with wood screws or Euroscrews.
Without assembly stop device.
It is suggested that the adapter is positioned near the centre of the height of the door.

Packing

Boxes 500 pcs.
Pallets 12.000 pcs.

Installation of Smove with adapter to be screw fixed to the door. Assembly instructions.

Insert Smove frontally into the adapter.

It is suggested that the adapter is positioned near the centre of the height of the door.

