


Assembly instructions


1 A Ceiling fixing

Fix the sliding profile to the ceiling using the screws indicated. Position the screws according to the drilling in the profiles, by placing two screws at both ends respectively. Distribute the screws symmetrically with respect to the sliding axis, as illustrated below.

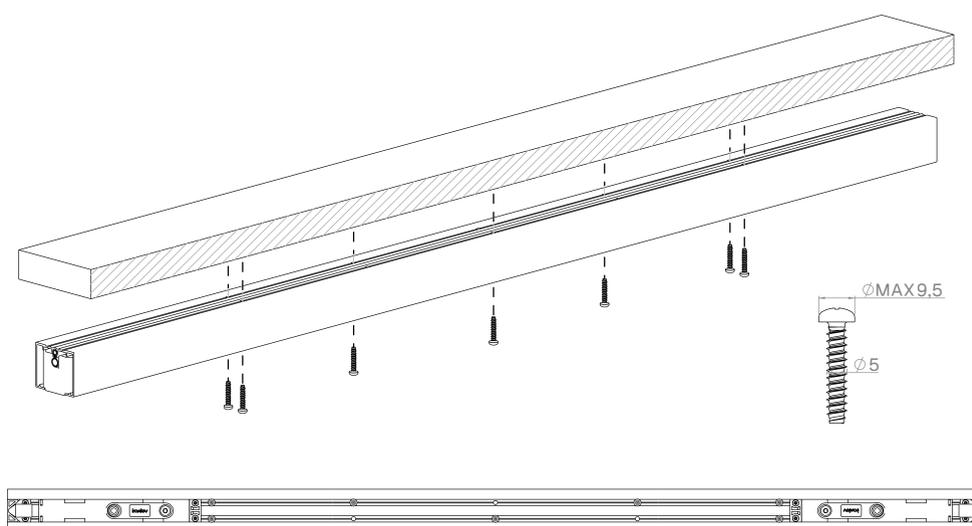



B Wall fixing

Fix the wall-mounted sliding profile using the accessory code 100577. Attach the lateral interface profile, ensuring that it is completely level. Then connect the sliding profile to the interface profile using the screws supplied. Position the screws according to the drilling in the profiles, by placing two screws at both ends respectively. Distribute the screws symmetrically with respect to the sliding axis, as illustrated below.

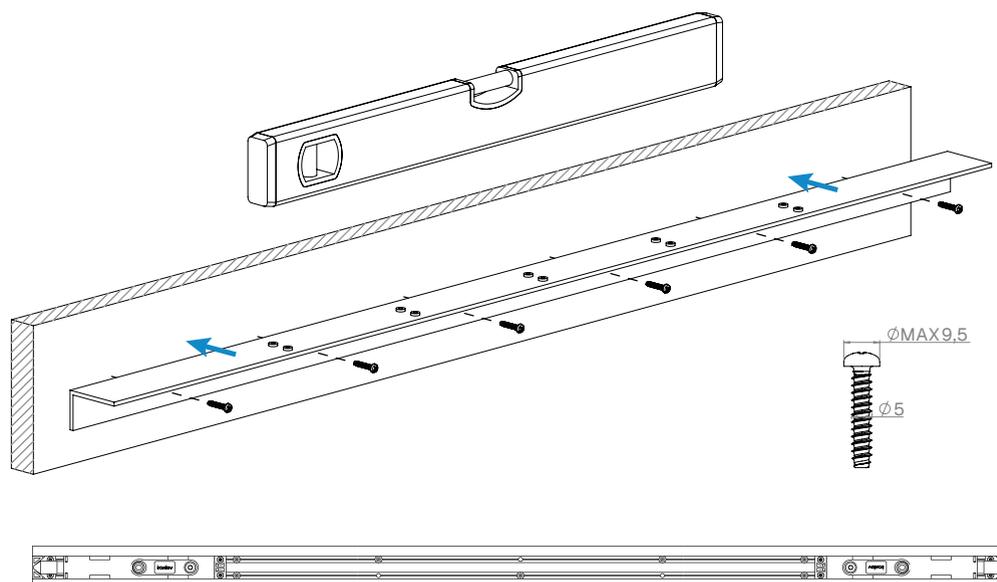


- 2** Fix the connection brackets to the door using the screws indicated, checking the dimension with respect to the side of the door. Make sure that the bracket is positioned symmetrically with respect to the thickness of the door.

Standard version

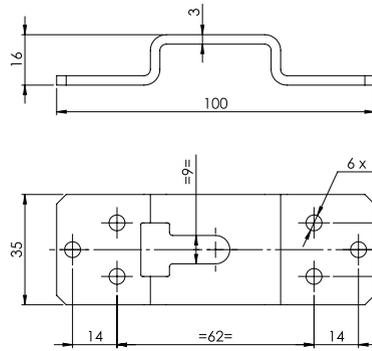
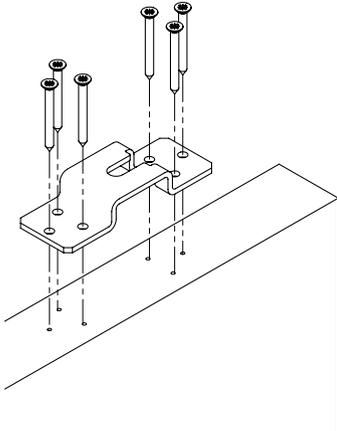


Standard bracket dimensions

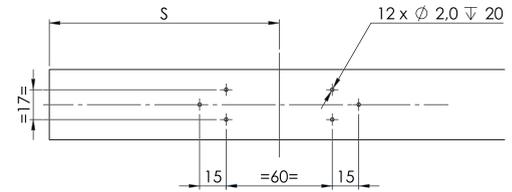


Fixing hole pattern

Alu-framed door version

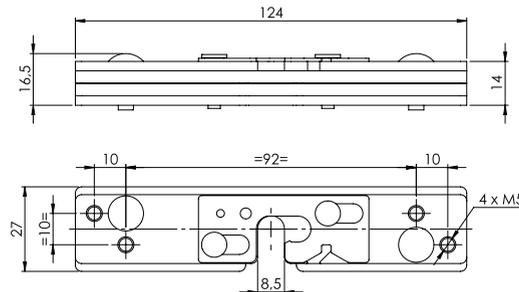
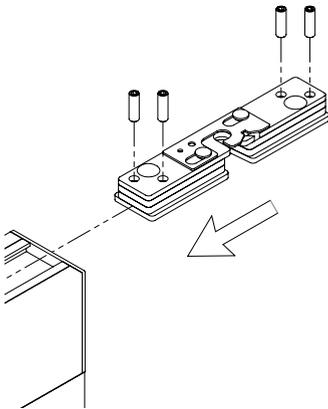


Aluminium bracket dimensions

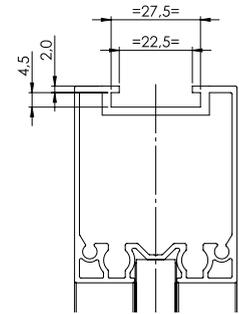


Housing seat for aluminium bracket profile

Wooden door version

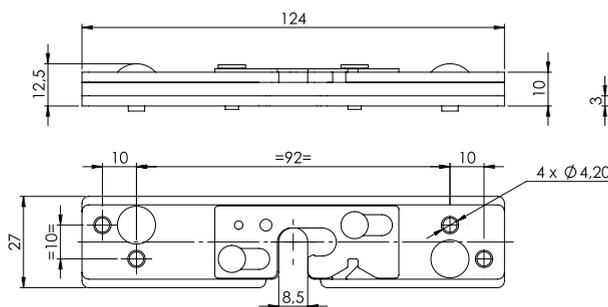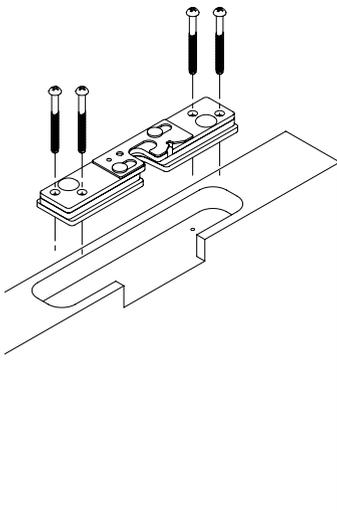


Wood-version bracket dimensions

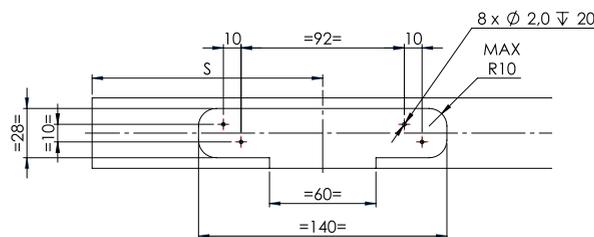


Door leaf machining for built-in fixing - 14 mm depth


- 3** Place the lower guide into the recess in the door. For wooden doors, fixing is by pressure, for alu-framed doors, fixing is by screws.

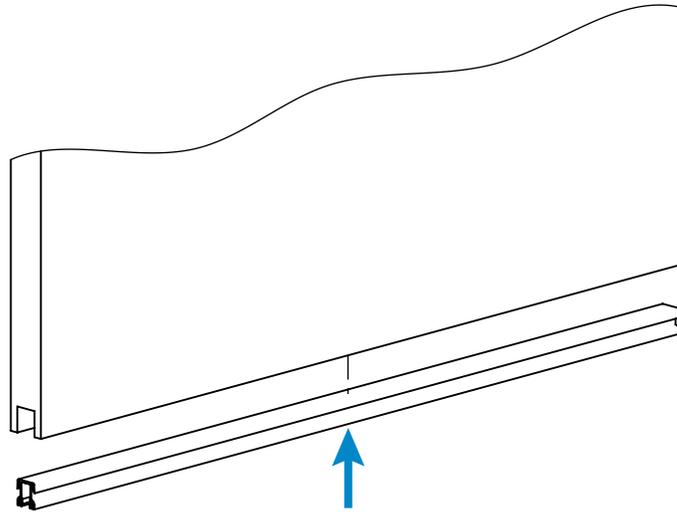


- 4** Fix the plastic floor guide element using screws.

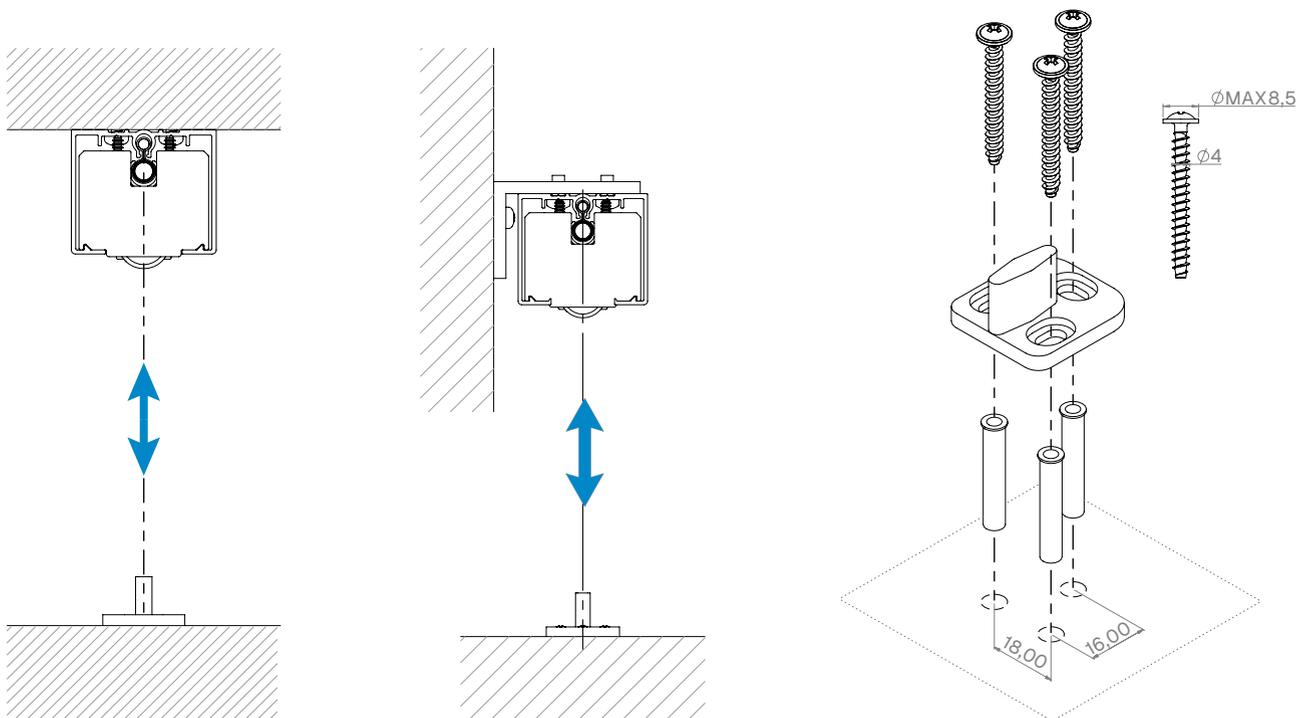


- 5** Remove the plastic protection profile and the two transport stopper caps.

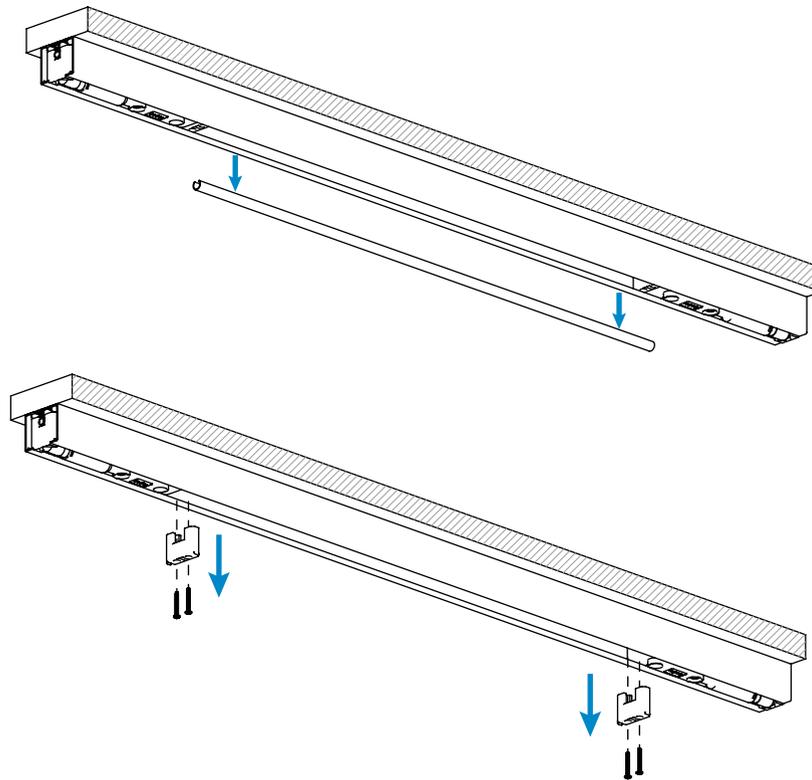


- 6** Insert the two pins of the connection brackets with their nuts and washers. Pre-tighten the pins to bring them to the dimension indicated.

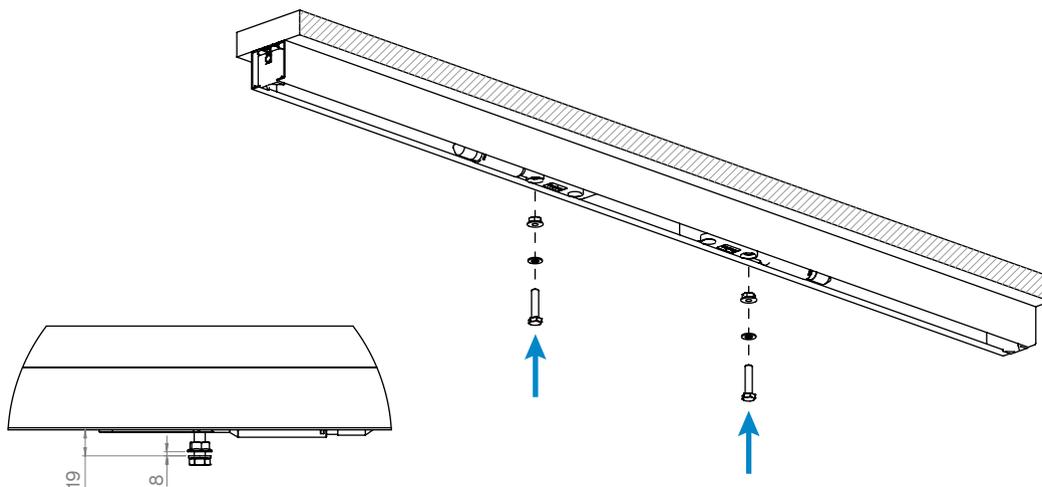


- 7** Mount the door onto the system, inserting first the guide element into the lower profile and subsequently the brackets into the appropriate pins.

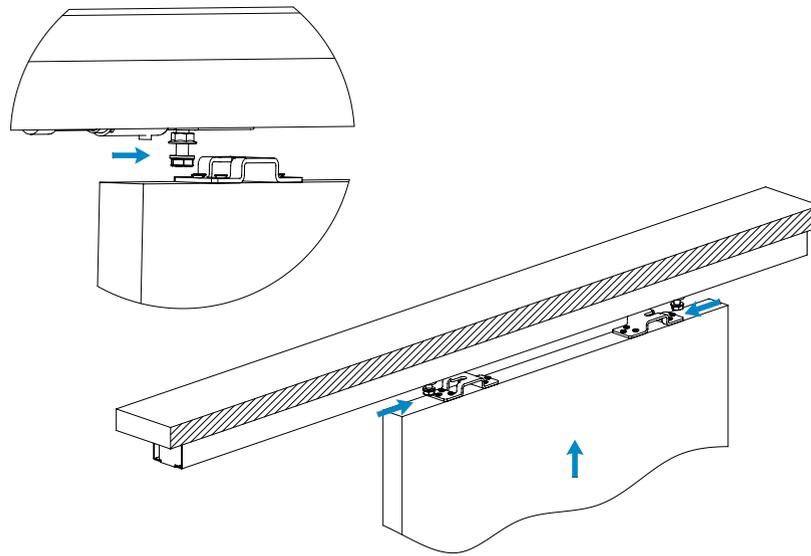


- 8** Adjust the door vertically using the two M8 pins. After adjustment, fix in place using the locknut.

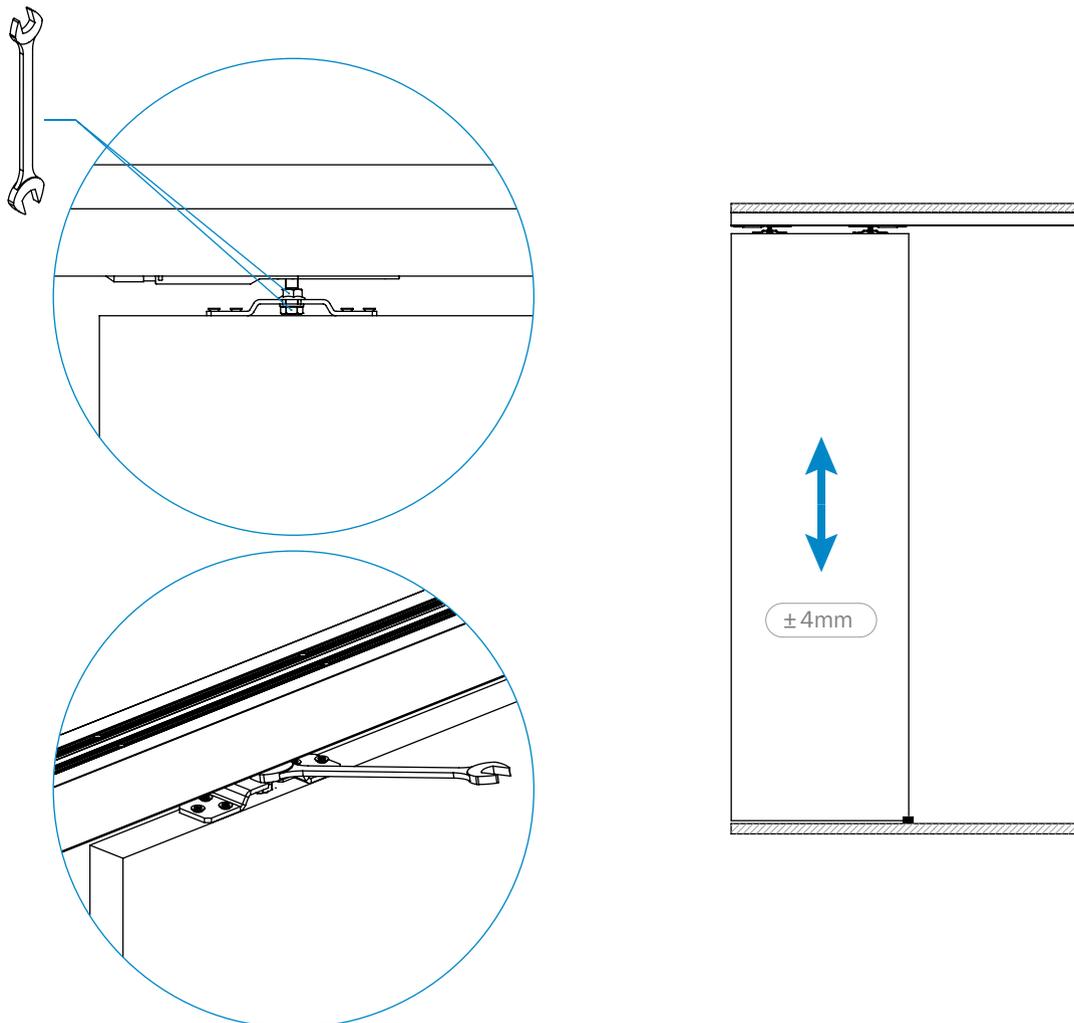

- 9** To fix the cover in wall configuration, apply the caps and then the cover laterally by clipping it onto the caps.

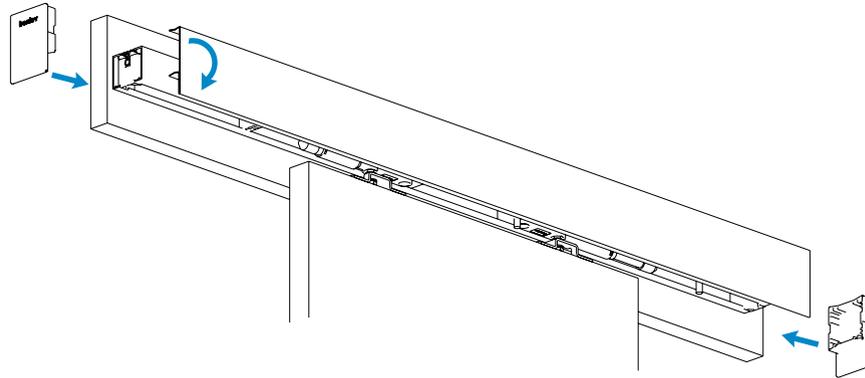

- 10** To fix the cover in ceiling configuration, use the spacers to fix the profile to the ceiling and then apply the caps laterally.

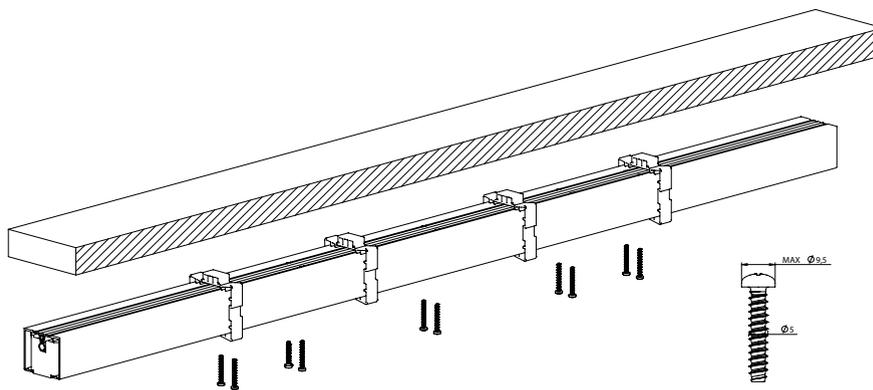

- 11** Then apply the covers laterally on both sides using the clipping profile of the spacers and caps.

