
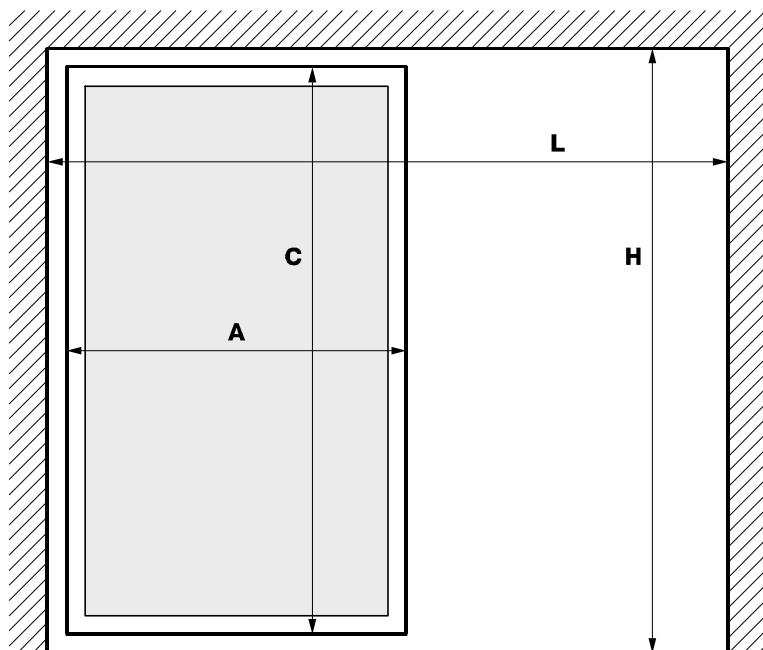



terra wardrobe front configuration program

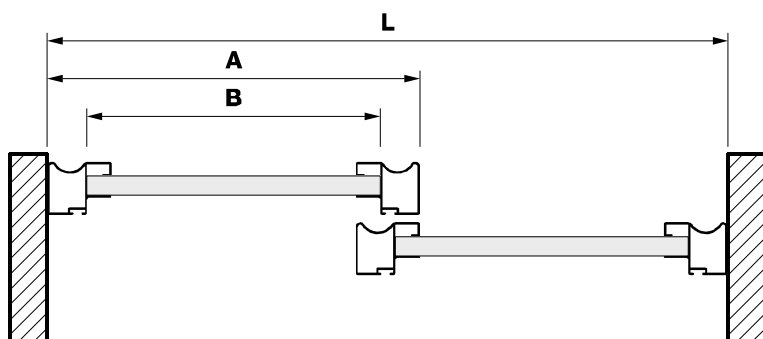

- L** · wardrobe width ·
- H** · wardrobe height ·
- A** · door width ·
- C** · door height ·
- B** · board width ·
- D** · board height ·



· bottom track assembly ·

CBD60 (511500***)




X = 25 mm

CBD85-10
513500***





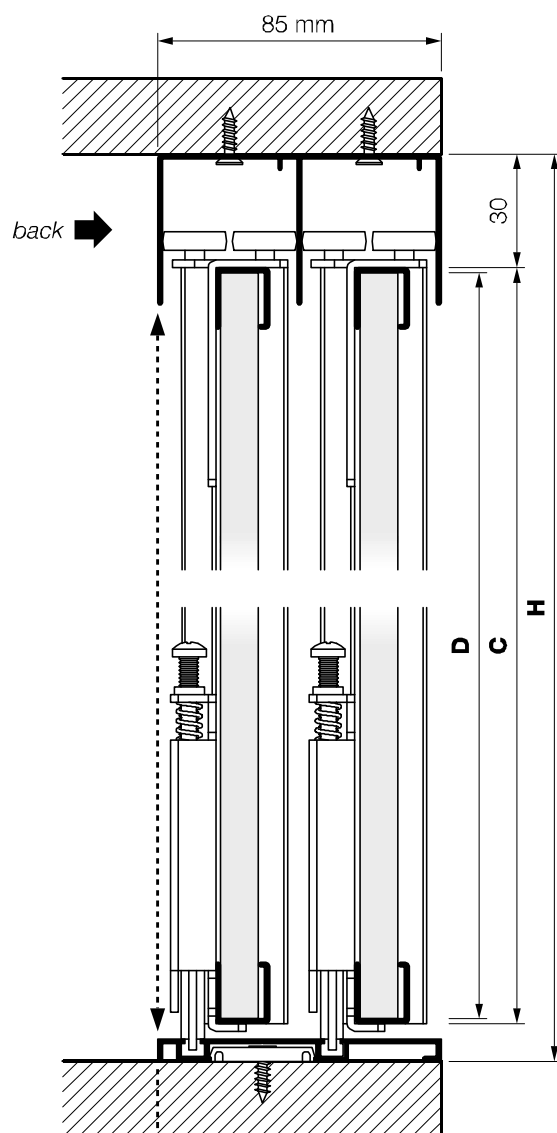


rear alignment

front

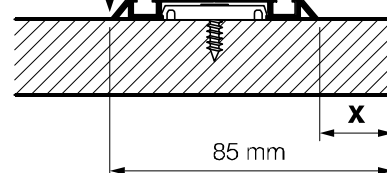


terra doors assembly
program

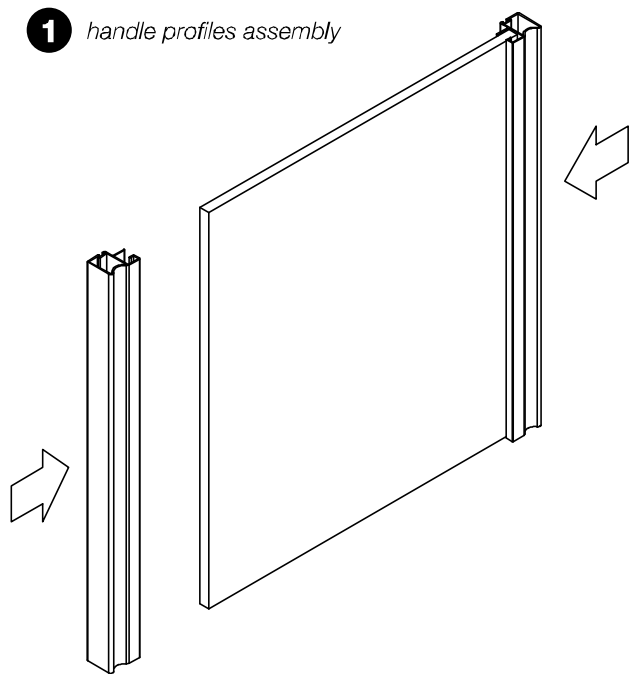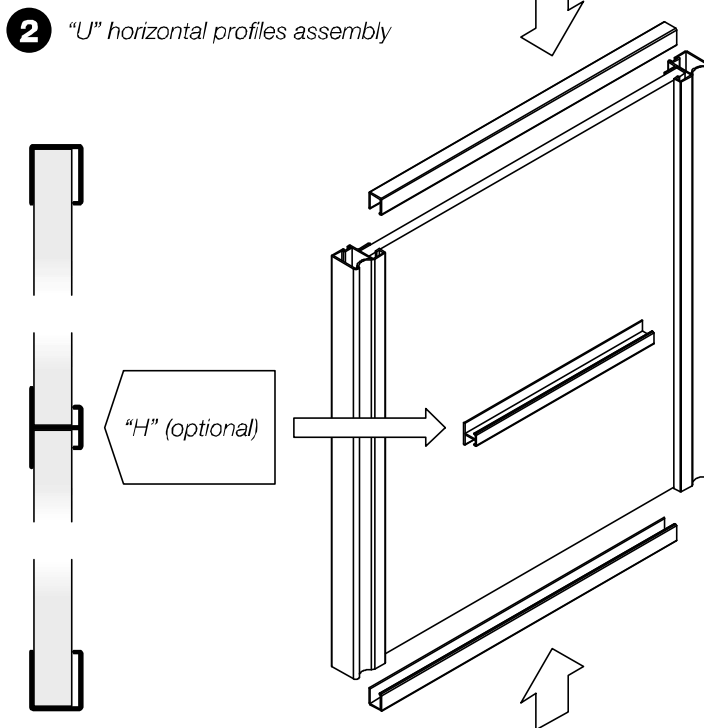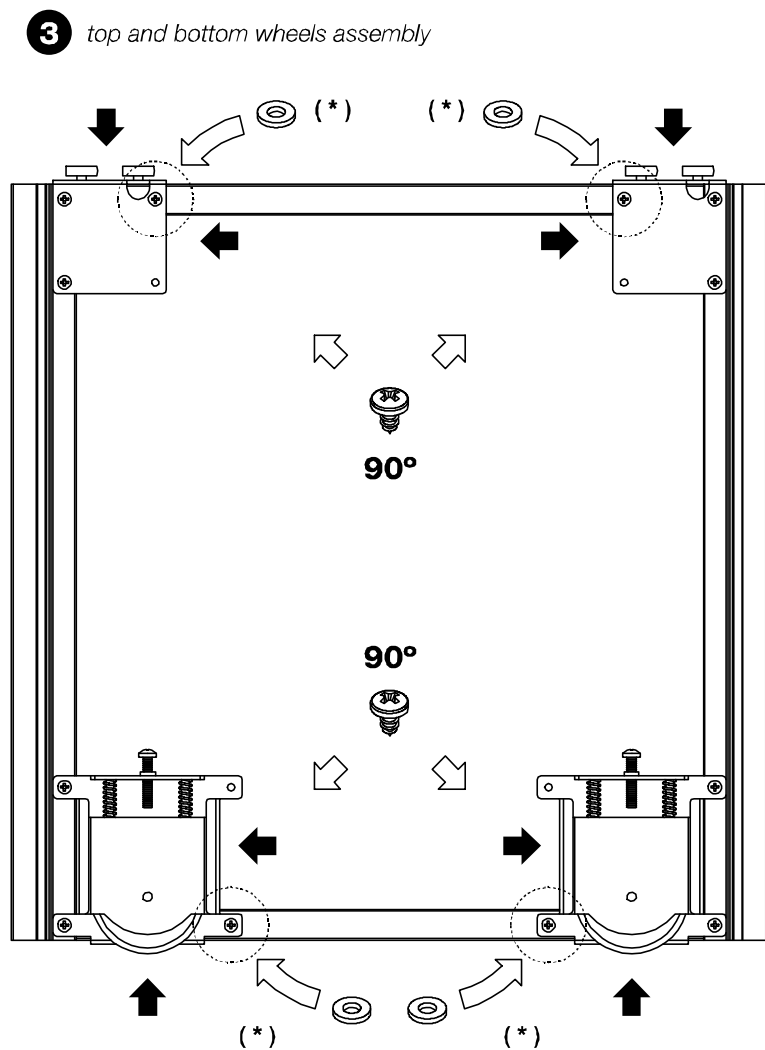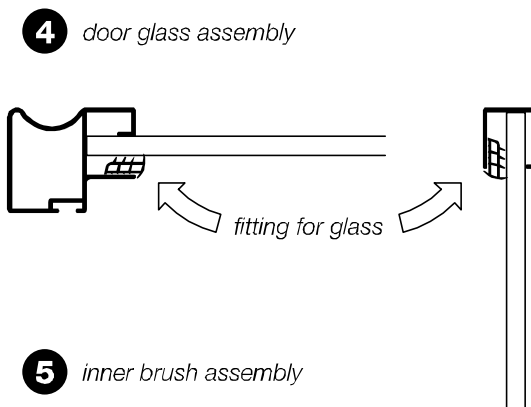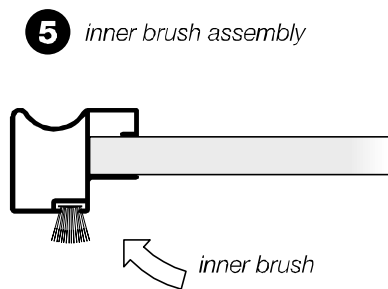


*** IMPORTANT NOTICE:**
Use the “G” spacers ONLY for the following
Minimal Series profiles.

terra tracks and doors installation program

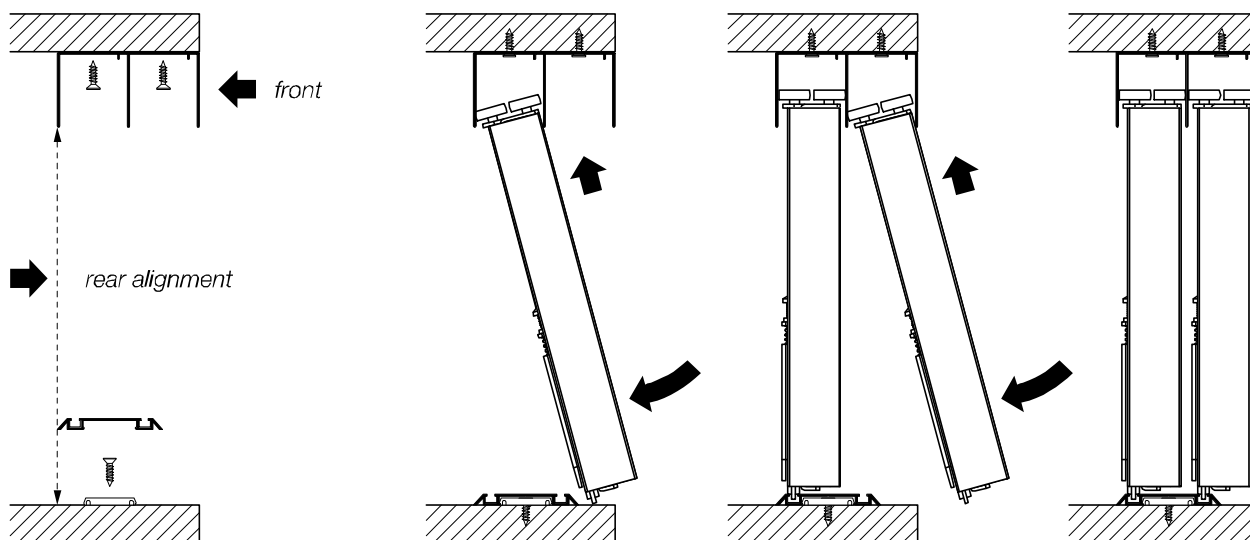


6 tracks placement

7 doors installation in wardrobe front

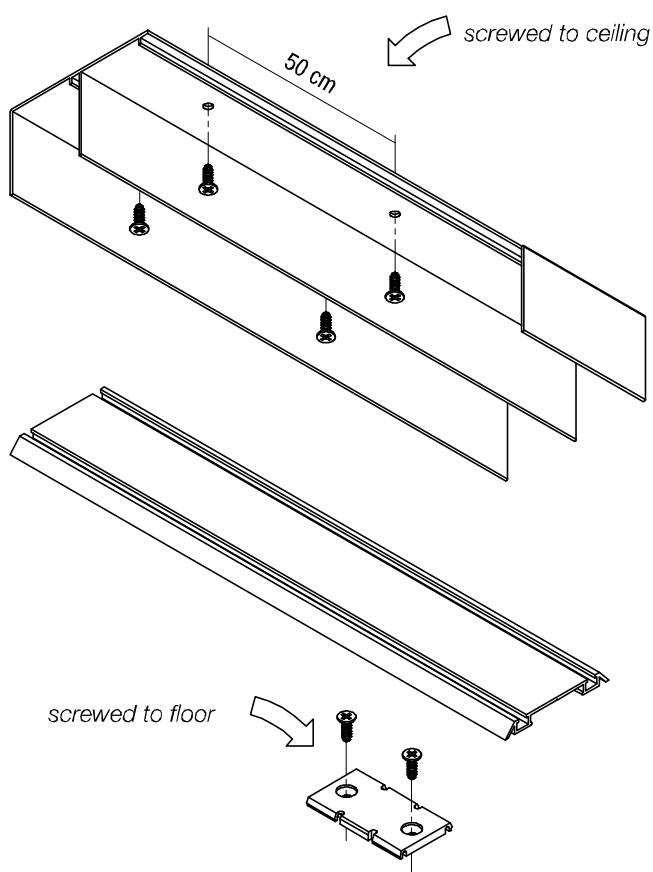

8 height adjustment for leveling the door

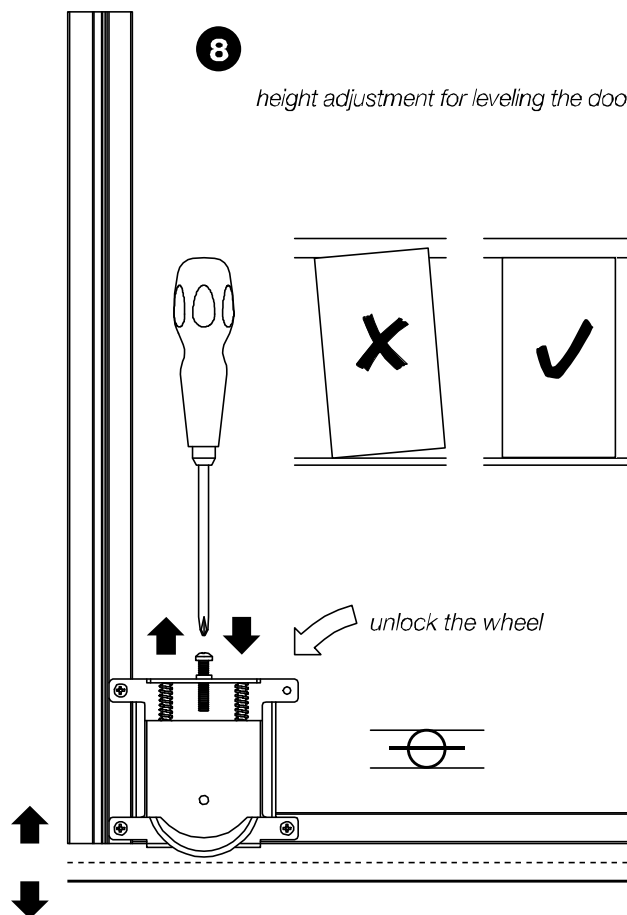

· door height ·


H · wardrobe height ·

C · door height ·

D · board height ·


D = **C** - 3 mm

CBD60
511500***



C = **H** - 41 mm

CBD85-10
513500***



C = **H** - 44 mm

· door width ·

$$A = \frac{L}{2} + 12,5 \text{ mm}$$

$$B = \frac{L}{2} - 17,5 \text{ mm}$$

$$A = \frac{L}{3} + 16,5 \text{ mm}$$

$$B = \frac{L}{3} - 13,5 \text{ mm}$$

$$A = \frac{L}{4} + 12,5 \text{ mm}$$

$$B = \frac{L}{4} - 17,5 \text{ mm}$$

2

· doors ·

3

· doors ·

4


· doors ·

L · wardrobe width ·

A · door width ·

B · board width ·

TR19-S85
560260***



TR18UP
S562290A02

